

BATERIE PATONA PRO ACER 4400 MAH

Cena celkem:	869 Kč (bez DPH: 718 Kč)
Běžná cena:	956 Kč
Ušetříte:	87 Kč
Kód zboží:	PORB0002
Part No.:	PT2173
Záruka:	24 měsíce (ů)
Stav:	Nové zboží

Popis

PATONA baterie pro Acer 4400 mAh

Kompatibilní baterie pro notebooky Acer. Baterie se vyznačují vysokou kvalitou, mají integrovanou ochranu proti přetížení a přebíjení.

ZÁKLADNÍ SPECIFIKACE

Kapacita: 4400 mAh

Technologie baterie: Li-iontová

Nahrazuje baterie: 31CR19/652, 31CR19/65-2, 31CR19/66-2, 934T2078F, AK.006BT.075, AK.006BT.080, AS10D31, AS10D3E, AS10D41, AS10D51, AS10D56, AS10D56, AS10D5E, AS10D61, AS10D71, AS10D73, AS10D75, AS10D7E, AS10D81, AS10G3E, BT.00603.111, BT.00603.117, BT.00603.124, BT.00604.049, BT.00605.062, BT.00605.065, BT.00606.008, BT.00607.125, BT.00607.126, BT.00607.127, BT.00607.130, EAS10D61, LC.BTP00.123, LC.BTP00.127, ZQ3

Pro notebooky: Acer 4250 Series, 4251 Series, 4252 Series, 4253 Series, 4315, 4333 Series, 4339 Series, 4349 Series, 4551 Series, 4552 Series, 4560 Series, 4625 Series, 4733 Series, 4738 Series, 4739 Series, 4741 Series, 4743 Series, 4750 Series, 4752 Series, 4755 Series, 4771 Series, 5250, 5251 Series, 5252 Series, 5253 Series, 5333, 5336, 5551 Series, 5552 Series, 5560 Series, 5733 Series, 5736 Series, 5741 Series, 5742 Series, 5749 Series, 5750 Series, 5755 Series, 6073, 7251 Series, 7551 Series, 7552 Series, 7560 Series, 7741 Series, 7750 Series, eMachines E440 Series, eMachines E442 Series, eMachines D528 Series, eMachines D530 Series, eMachines E640 Series, eMachines E642G Series, eMachines E650 Series, eMachines E730 Series, eMachines E732 Series, eMachines G440 Series, eMachines G530 Series, eMachines G640 Series, eMachines G730 Series, TravelMate 4370 Series, TravelMate 4740 Series, TravelMate 4750 Series, TravelMate 5335 Series, TravelMate 5340 Series, TravelMate 5542 Series, TravelMate 5735 Series, TravelMate 5740 Series, TravelMate 5742 Series, TravelMate 5744 Series, TravelMate 5760 Series, TravelMate 6495 Series, TravelMate 6595 Series, TravelMate 7740 Series, TravelMate 7750 Series, TravelMate 8472 Series, TravelMate 8473 Series, TravelMate 8572 Series, Travelmate 8573 Series, TravelMate TimelineX 6495 Series, TravelMate TimelineX 6595 Series, TravelMate TimelineX 8473 Series, TravelMate

TimelineX 8573 Series, Easynote LM81, Packard Bell Easynote LM82, Easynote LM83, Easynote LM85, Easynote LM86, Easynote LM87, Easynote LM94, Easynote LM98, EasyNote LS11 Series, EasyNote LS13 Series, EasyNote NM85 Series, EasyNote NM86 Series, EasyNote NM87 Series, EasyNote NM88 Series, EasyNote NM89 Series, EasyNote NM98 Series, EasyNote NS11 Series, EasyNote NS44 Series, Easynote TM01, Easynote TM80, Easynote TM81, Easynote TM82, Easynote TM83, Easynote TM85, Easynote TM86, Easynote TM87, Easynote TM89, Easynote TM94, Easynote TK11, Easynote TK11BZ, Easynote TK36 Series, Easynote TK37 Series, Easynote TK81 Series, Easynote TK83 Series, Easynote TK85 Series, Easynote TK87 Series, EasyNote TS11 Series, EasyNote TS13 Series, EasyNote TS44 Series